

PALLET JACK/ TRUCK



Lowering position:

Pull up the finger tip control handle to lower the truck.

- · Neutral position:
 - Stay the position during move.
- Lifting position:

Pull down the tip control, press the pump to raise the truck.

